



2 Designs / 5 Colors

2 Gang Back Box Adapter

- Flat Mount – Screen sits on top of the cover



- Flush Mount – Screen sits flush with cover





Anodized Black



Brushed Metal



White




Satin Brass




Satin Nickel

Inново 4 Inch Touch Panel Mounting Options

Flat Mount

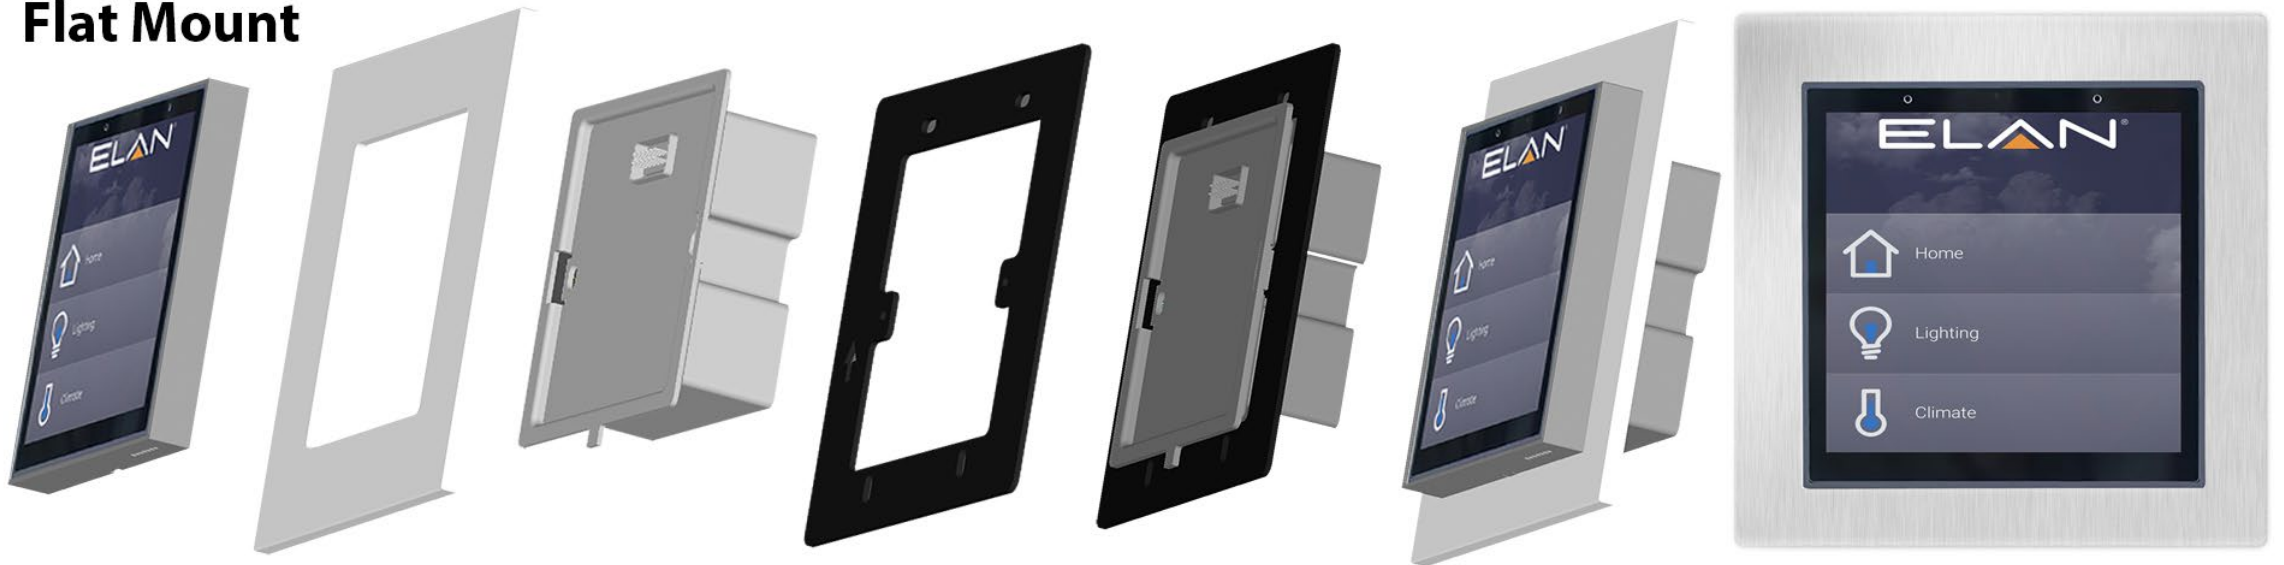


Flat Mount Assembly For New Work Boxes

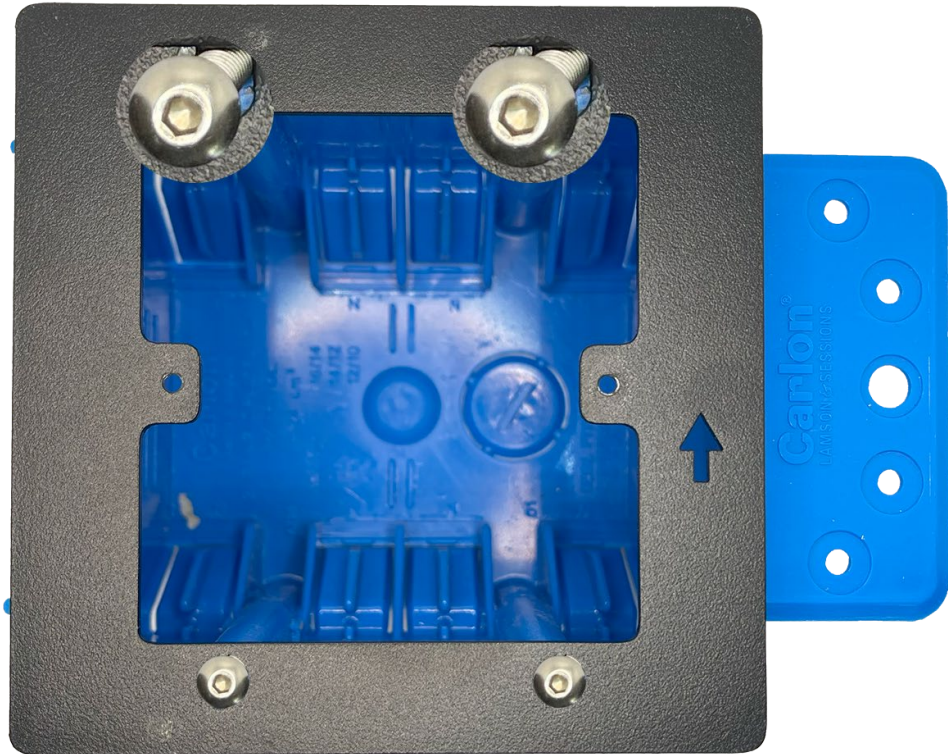

- Line up the Mounting Bracket with the Mounting holes on the backbox
- Use a hex key to drive the included screws into the backbox.
- Adjust the frame to fit the back box.
- The frame has vertical and horizontal holes that can be used for alignment
- Make sure the frame sits flat on the backbox
- **For OLD WORK back boxes see section below on how to use the included washers**



Flat Mount Assembly For New Work Boxes

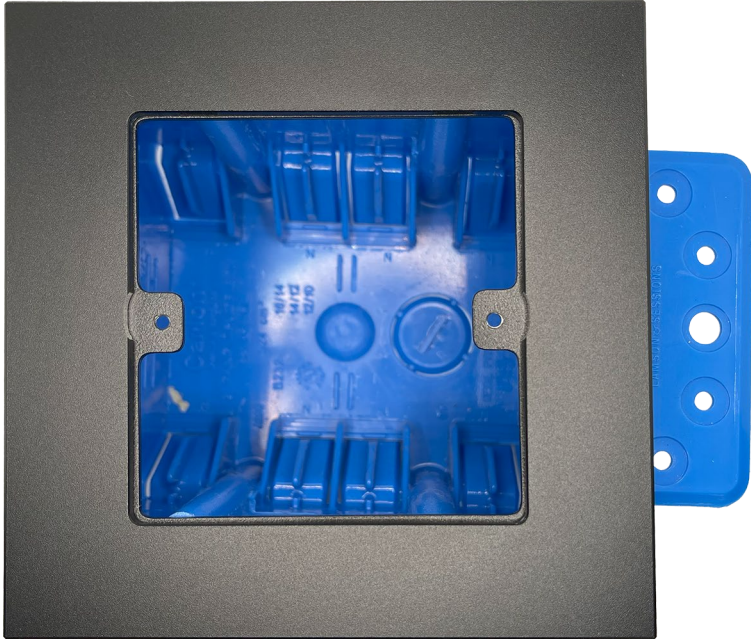



- Add the flat cover over the frame
- **Separate the screen from the base by pulling up from the top center. Don't over force the pieces**
- Use the included truss-head screws to evenly mount the base of the screen over the flat cover and the frame
- The base will hold the cover in place firmly.



Flat Mount Assembly For New Work Boxes



- Firmly Press the Screen over the base
- Make sure it snaps shut
- Use the bottom tab to align the screen

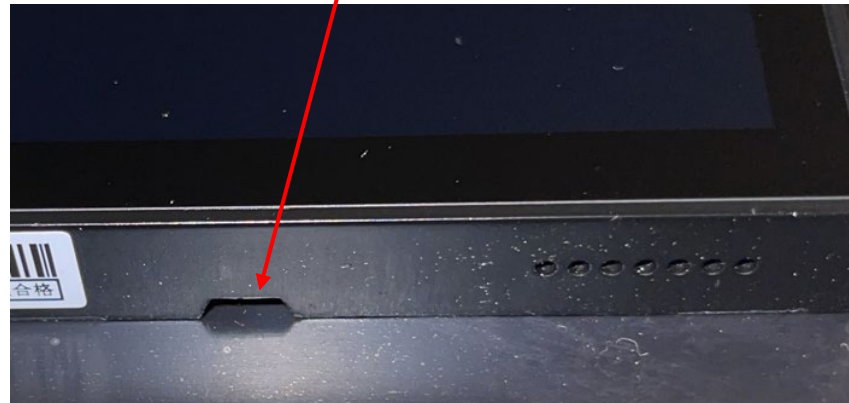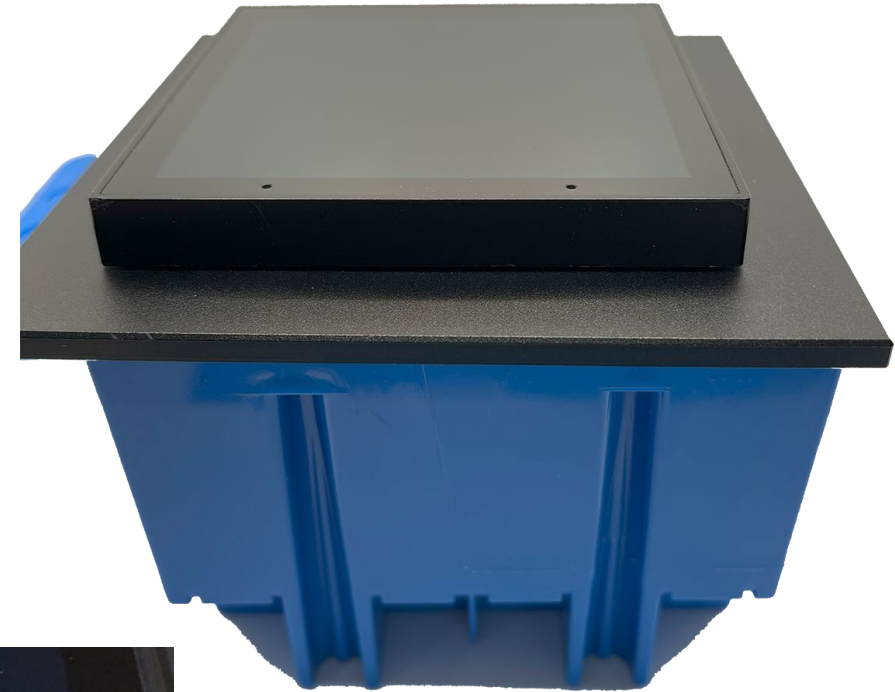

Flush Mount



Innovo 4 Inch Touch Panel Mounting Options



Anodized Black



Brushed Metal



White




Satin Brass



Satin Nickel


Flush Mount Assembly For New Work Boxes

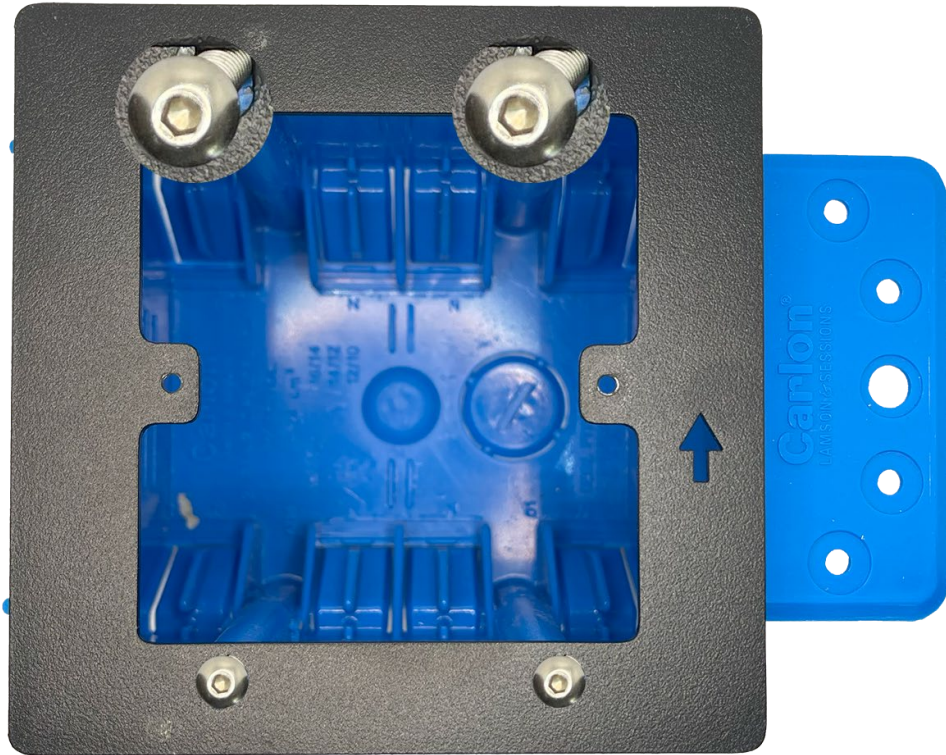

- Line up the Mounting Bracket with the Mounting holes on the backbox
- Use a hex key to drive the included screws into the backbox.
- Adjust the frame to fit the back box.
- The frame has vertical and horizontal holes that can be used for alignment
- Make sure the frame sits flat on the backbox
- For OLD WORK back boxes see section below on how to use the included washers




Flush Mount Assembly For New Work Boxes

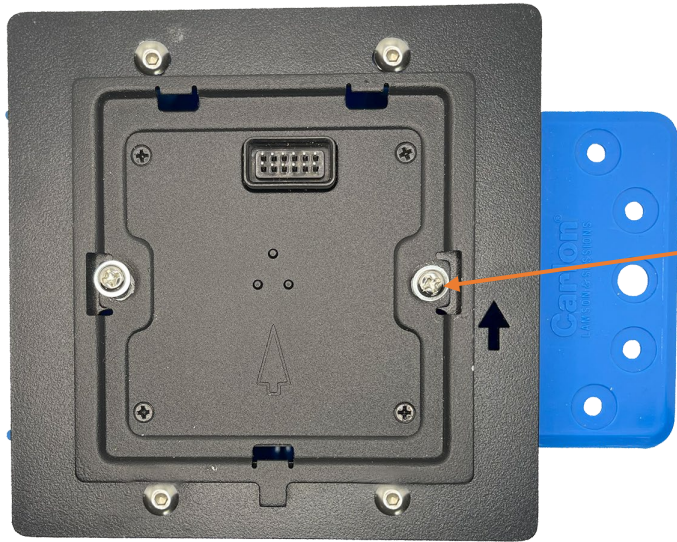

- Separate the screen from the base by pulling up from the top center. Don't over-force the pieces.
- Use the included truss-head screws to evenly mount the base of the screen over the mounting frame.
- Snap the Screen back on the base.




Flush Mount Assembly For New Work Boxes

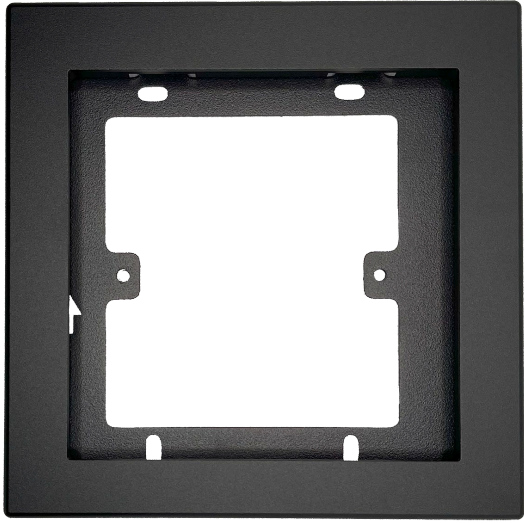


- Place the flush mount cover over the screen.
- Place holes facing down to allow for speaker audio
- The Magnets will hold it firmly in place



Flush Mount Assembly For New Work Boxes

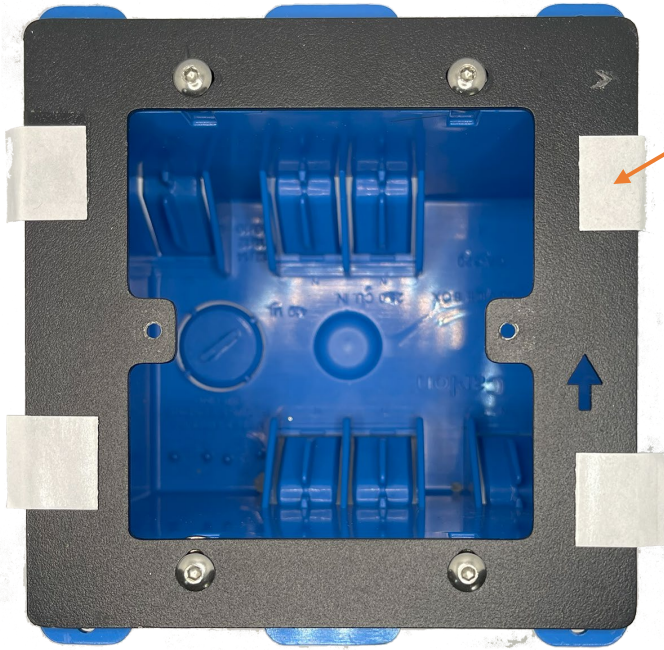

- For an extra firm grip, affix the included industrial strength glue spots around the frame as show in the picture
- The glue spots are easy peel with one edge exposed
- Peel off the glue spot shield paper
- Add the Screen
- Affix the flush mount cover
- Make sure you align the cover first while hovering. Once the glue spots touch the cover, it will form a firm bond.
- In case you need to adjust, pull very hard to remove the plate
- Align then push down

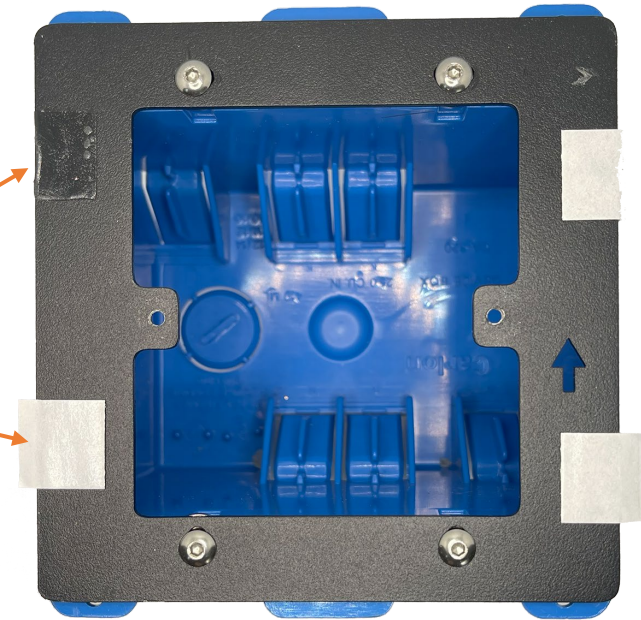

Special Mounting Instructions for OLD WORK Backboxes

Failure to attach washers for support will void the warranty



- OLD WORK Boxes have indented space forming islands for support.
- The Frame included will bend if not supported.
- Affix the included washers to either the box or the mounting frame.



**New Work is Flat
No Middle Islands**

**Attach BackPlate
Directly.**

**Do NOT Use
WASHER**

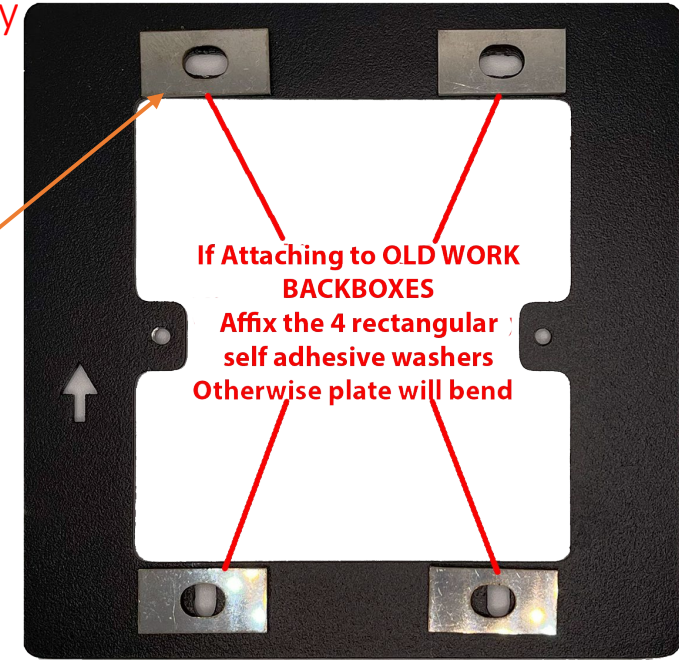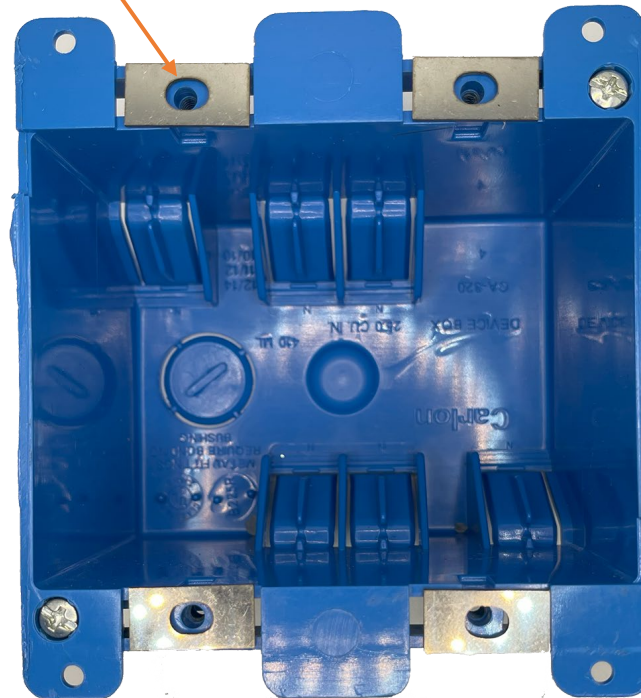

**If Attaching to OLD WORK
BACKBOXES
Affix the 4 rectangular
self adhesive washers
Otherwise plate will bend**

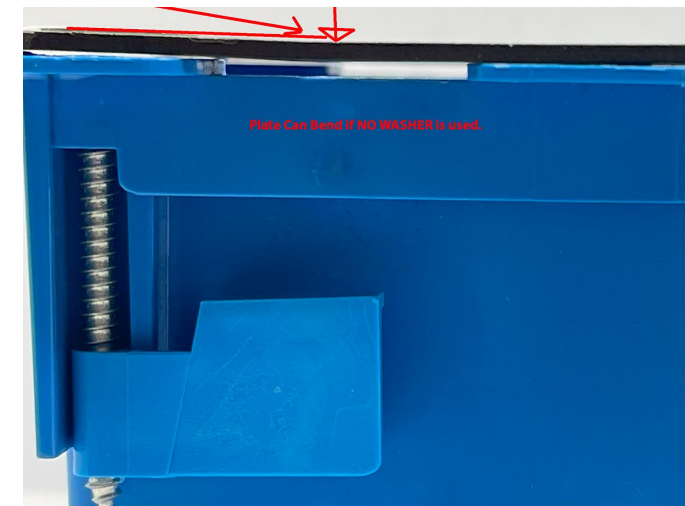


Plate Can Bend if NO WASHER is used.